



STEP 1:

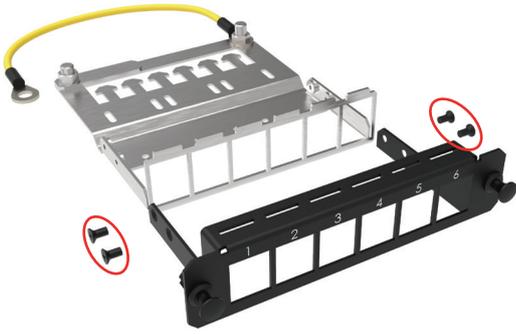

Remove the 4 screws in order to disassemble the module.


STEP 2:

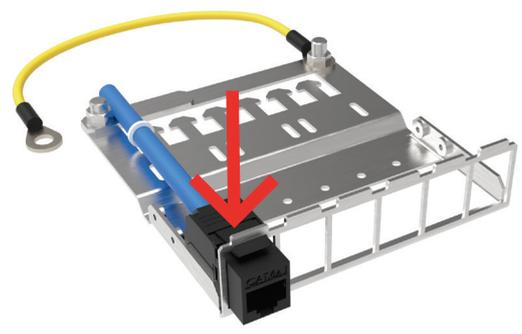

Load the keystone jacks into each port individually.


Note: If the latch on the keystone jack can't be pressed in with the thumb, please use the straight screw driver to push it in.

STEP 3:

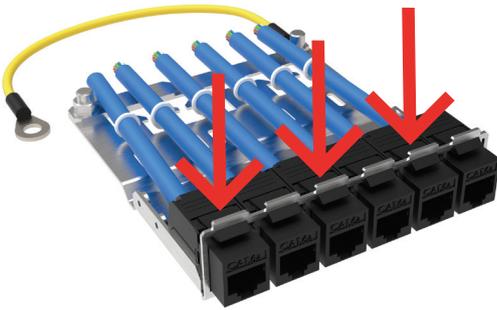


Continue loading all keystone jacks into the back plate, make sure all keystone jacks sit in the ports properly.

STEP 4:

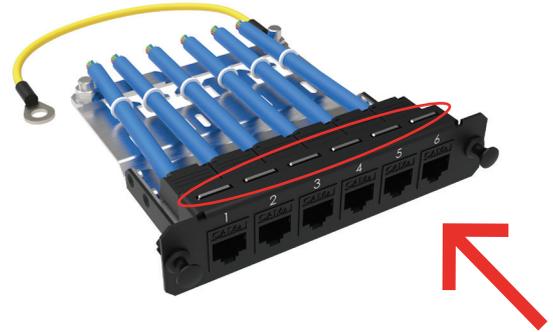


Assemble the back plate into front plate, make sure all the positioning points are sitting properly and slightly protrude as marked in the circle above.

STEP 5:

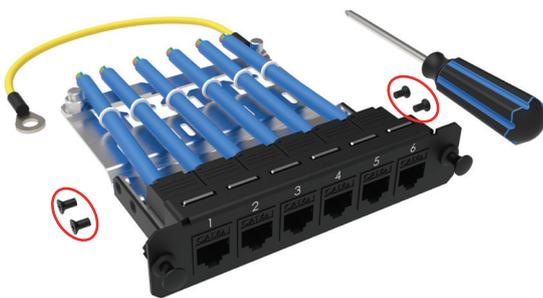

Tighten the four screws again.

STEP 6:

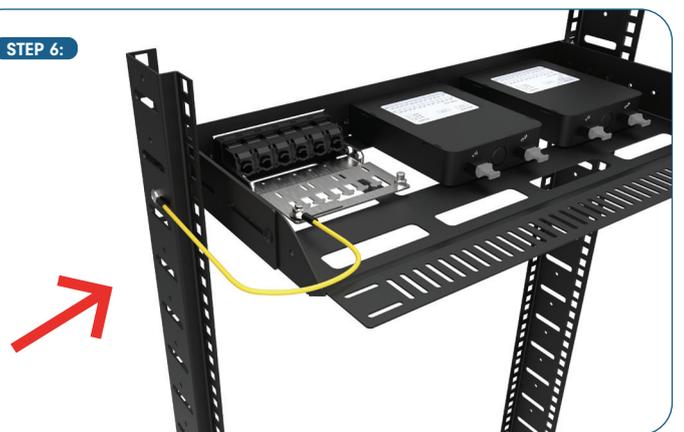

For shielded keystone jacks, attach the ground wire to the rack.

